# IcIA N065 Intelligent Compact Drive Product manual

V2.00, 12.2008





www.schneider-electric-motion.com



### Important information

The drive systems described here are products for general use that conform to the state of the art in technology and are designed to prevent any dangers. However, drives and drive controllers that are not specifically designed for safety functions are not approved for applications where the functioning of the drive could endanger persons. The possibility of unexpected or unbraked movements can never be totally excluded without additional safety equipment. For this reason personnel must never be in the danger zone of the drives unless additional suitable safety equipment prevents any personal danger. This applies to operation of the machine during production and also to all service and maintenance work on drives and the machine. The machine design must ensure personal safety. Suitable measures for prevention of property damage are also required.

See safety section for additional critical instructions.

#### Not all product variants are available in all countries.

Please consult the current catalogue for information on the availability of product variants.

We reserve the right to make changes during the course of technical developments.

All details provided are technical data and not promised characteristics.

In general, product names must be considered to be trademarks of the respective owners, even if not specifically identified as such.

# **Table of Contents**

	Important information 2					
	Table of Contents					
	Writing	conventions and symbols	7			
1	Introdu	ction	9			
	1.1	About this manual	9			
	1.2	Scope of supply	9			
	1.3	Unit overview	10			
	1.4 1.4.1 1.4.2 1.4.3 1.4.4	Components and interfaces Components gear Interfaces Parameters and operating mode	11 12 13 13			
	1.5	Type code	14			
	1.6	Documentation and literature references	15			
	1.7	Directives and standards	16			
	1.8	Declaration of conformity	17			
2	Safety .		19			
	2.1	Qualification of personnel	19			
	2.2	Intended use	19			
	2.3	Hazard categories	20			
	2.4	General safety instructions	20			
	2.5	Monitoring functions	22			
3	Technic	al Data	23			
	3.1	Environmental conditions	23			
	3.2 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6	Electrical and mechanical data Degree of protection Service life IcIA N065 DC024 IcIA N065 V - with spur wheel gearing IcIA N065 U- with angled wormgear Electrical terminals	24 24 25 27 31 35			
4	Installa	tion	37			
	4.1	Electromagnetic compatibility, EMC	37			
	4.2 4.2.1	Mechanical installation	39 39			

	4.3 4.3.1 4.3.2 4.3.3 4.3.4 4.3.5 4.3.6 4.3.7 4.3.8 4.3.9	Electrical installation. Overview of all connections. Equipotential bonding connection Overview signal interface. Supply voltage connection 24VDC Connection control inputs Connection Enable. Fieldbus connection. Connection Braking Resistor Controller. Checks.	41 42 43 44 46 47 48 50 51
5	Commis	ssioning	. 53
	5.1	General safety instructions	53
	5.2	Commissioning procedure	55
	5.3 5.3.1	Commissioning software ICCT	56 56
	5.4	Difference between the controller objects of D065 and N065	57
6	Operatio	on	. 59
	6.1	Operating modes	59
	6.2	Functions	60
	6.3 6.3.1 6.3.2	Protection and monitoring functions Enable function	61 61 62
7	Diagnos	stics and troubleshooting	. 67
	7.1	Fieldbus communication error diagnosis	67
	7.2 7.2.1 7.2.2	Error diagnosis over fieldbus Message objects Messages on the device status	68 68 69
	7.3	Error code table	74
8	Access	ories and spare parts	. 77
	8.1	Accessories	77
9	Service	, maintenance and disposal	. 79
	9.1	Service address	79
	9.2	Maintenance	79
	9.3	Replacing units	80
	9.4	Shipping, storage, disposal	81
10	Glossar	у	. 83
	10.1	Units and conversion tables	83

10.1.1	Length	83
10.1.2	Mass	83
10.1.3	Force	83
10.1.4	Power	83
10.1.5	Rotation	84
10.1.6	Torque	84
10.1.7	Moment of inertia	84
10.1.8	Temperature	84
10.1.9	Conductor cross section	84
10.2	Terms and Abbreviations	85
11 Index		87

### Writing conventions and symbols

*Work steps* If work steps must be carried out in sequence, they are shown as follows:

- Special prerequisites for the following work steps
- Step 1
- $\lhd$  Important response to this work step
- Step 2

If a response to a work step is specified, this will inform you that the step has been carried out correctly.

Unless otherwise stated, the individual instruction steps must be carried in the given sequence.

- *Lists* Lists can be sorted alphanumerically or by priority. Lists are structured as follows:
  - Point 1
  - Point 2
    - Subpoint to 2
    - Subpoint to 2
  - Point 3

*Making work easier* Information on making work easier can be found at this symbol:



This offers supplementary information on making work easier. See the chapter on safety for an explanation of the safety instructions.

Parameters

Parameters are shown as follows:

Group.Name Index:Subindex

### 1 Introduction

### 1.1 About this manual

This manual is applicable for all N065 standard models.

### 1.2 Scope of supply

- ► Check the parts supplied to make sure they are complete.
- ► Keep the original packaging in case it is necessary to return the compact drive to the manufacturer for repair.

Scope of supply The scope of supply includes:

ltem	Quan- tity	Designation
1	1	Compact drive IcIA
		For the exact unit type see the type code

#### 1.3 Unit overview

Intelligent compact drives IclA

The IcIA N065 DC024 intelligent compact drives are servo drives based on an electronically commutated three-phase synchronous motor, referred to as a brushless DC motor and a block-commutated positioning controller. Power and control electronics with fieldbus terminal, motor, position sensor and gearing are integrated in the compact unit.



Figure 1.1 Unit overview

Area of application The compact drives are primarily designed for automatic positioning of format axes during setup of production machines or for profile positioning of handling systems. The speed control operating mode is another area of application. This makes it easy to implement transport and metering functions on production machines.

Special features The name IcIA stands for Integrated closed loop Actuator; actual and reference values are prepared in a closed control loop. Features of the compact drives are:

- compact construction
- low wiring requirements
- excellent reliability
- integrated positioning and speed control functions
- fieldbus communications interface
- high power density

### 1.4 Components and interfaces



Figure 1.2 Components and interfaces

The intelligent compact drive has the following in compact design:

- Brushless DC motor
- Position sensor
- Power and control electronics
- Interfaces for fieldbus communications, enable signal, manual mode and supply voltage.
- Gearing (optional)

#### 1.4.1 Components

*Motor* The electronically commutated three-phase synchronous motor in combination with the rare-earth magnets offers outstanding power density and thus very high efficiency.

The motors have a high detent torque. This means that often the use of a holding brake can be dispensed with. Motors with 2 pole pairs have a higher detent torque and an internal resolution of 12 increments per revolution. The model with 4 pole pairs offers a lower detent torque and the internal resolution is 24 increments per revolution.

- Position sensorThe position sensor and controller electronics form a quasi-absolute<br/>value sensor. 5 hall sensors capture the actual position of the rotor<br/>where the number of pole pairs p = 2 with an absolute resolution per rev-<br/>olution of 12 increments and 24 increments with p = 4 pole pairs . A po-<br/>sition counter converts the actual position to a 32-bit absolute value.<br/>After positioning and before switching off the compact drive, the rotor po-<br/>sition and absolute value are saved in the internal memory. When the<br/>compact drive is switched on again, the quasi-absolute value sensor de-<br/>tects whether the motor axis has been mechanically shifted within a rev-<br/>olution and reports this as "Drive not referenced".
- *power electronics* The power electronics converts the speed or position instructions from the control electronics for motor control. Monitoring functions continuously monitor for overvoltage and undervoltage and protect the compact drive from overload. The power electronics must be hardware-isolated via a second channel in parallel to the microcontroller. To ensure mini-

mum energy requirements, the electronics switch the power electronics off when the motor is at a standstill, the motor generates its detent torque from the permanent magnet field of the rotor.

#### 1.4.2 gear

The case of the IcIA N065 compact drives offers a selection of different types of gearing. Spur wheel gears and spur wheel angled wormgears are available

Spur wheel gears The IcIA N065 V- compact drive has a 2, 3 or 4-ratio spur wheel gear. The gear teeth are metal and fitted with needle bearings. An important feature is the high power density, the low torsional backlash and the compact length of the drive with spur wheel gear.



Figure 1.3 Intelligent compact drive with spur wheel gear

Angled spur wheel wormgears

The compact drive IcIA N065 U- is equipped with a 1 or 2 speed spur wheel gear and a wormgear. The drives with angled spur wheel wormgears have minimum torsional backlash and very high output torque. The variation of spur wheel and worm reduction can be set according to the application for high efficiency values up to self-locking. This type of gearing often proves suitable for implementation of compact and complex installation situations.



Figure 1.4 Intelligent compact drive with angled wormgear

#### 1.4.3 Interfaces

Power/signal interface	The compact drive is supplied with the operating voltage via the power interface.				
	The signal interface can be used in 2 different ways.				
	• The "Standard Interface" type offers the option of manually travers- ing the compact drive with the aid of configurable jog inputs.				
	<ul> <li>The "Sensor Interface" type makes homing of the drive easy with the evaluation of a reference switch and processing of two limit switches.</li> </ul>				
	This also allows factory application-specific types to be generated, for which three signals are available as inputs or outputs.				
Enable input	The enable signal input works in parallel to the microcontroller and offers a signal path to activate the integrated enable function.				
Connection for manual operation	The compact drive can be moved manually in both directions with the in put signals.				
	The compact drive must be referenced before manual operation.				
Fieldbus connection	The fieldbus interface is used for parameterisation and controlling the drive. This enables the drive to be integrated into a fieldbus network and controlled by a PLC.				
Equipotential bonding connection	We recommend connecting the compact drive and machine conduc- tively with the equipotential bonding connection to improve the EMC be- haviour.				

#### 1.4.4 Parameters and operating mode

The compact drive stores configuration and parameter data for gearbox, motor and power electronics in the electronic data sheet. The values are permanently stored in the drive when it delivered and be read out via the fieldbus.
2 electronic log-books record data from the movement mode. The fol- lowing are stored:
operating time of the drive
<ul> <li>total time of drive in positioning mode</li> </ul>
number of positionings.
When the drive power is shut off the positioning controller uses the volt- age of the internal charging capacitors to transfer the movement data to a log-book. Every eight hours of total positioning time the data are also saved to the second log-book.
Travel parameters and settings for the operating modes and functions of the compact drive are saved in a non-volatile data range and can be read and adjusted via the fieldbus. The compact drive is delivered with a factory setting. This setting remains saved in the event of power failure and can be reactivated by a fieldbus command.

## 1.5 Type code

Example:			IcIA	N06	5	1	2	DC024	V-007	Κ	CAN	00
Product family Intelligent Compact Drive IcIA			IcIA	N06	5	/	2	DC024	V-007	K	CAN	00
<b>Size (flange)</b> N06 = 66 mm			IcIA	N06	5	/	2	DC024	V-007	K	CAN	00
<b>Motor package length</b> 5 = 18 mm			IcIA	N06	5	/	2	DC024	V-007	K	CAN	00
Not used			IclA	N06	5	/	2	DC024	V-007	Κ	CAN	00
Number of pole pairs 2			IcIA	N06	5	/	2	DC024	V-007	K	CAN	00
Supply voltage DC024 = 24VDC			IcIA	N06	5	/	2	DC024	V-007	K	CAN	00
Gearing type	Step-up ge	ar	IclA	N06	5	/	2	DC024	V-007	К	CAN	00
O- without gearing		O-000										
V - with spur wheel gears	430:63 160:9 75:2 490:9 3675:32	V-007 V-018 V-038 V-054 V-118										
U - with angled wormgear	525:22 1715:32 735:8 3675:32	U-024 U-054 U-092 U-115										
Shaft type R = round, smooth shaft K = parallel key (only with spur w) F = D-shaped shaft (only with spu	heel gears) ur wheel gears)	1	IclA	N06	5	/	2	DC024	V-007	к	CAN	00
Communication interface CAN = CANopen			IcIA	N06	5	/	2	DC024	V-007	K	CAN	00
Reserve 00			IcIA	N06	5	/	2	DC024	V-007	К	CAN	00

### 1.6 Documentation and literature references

The following User's manuals are supplied with this drive system:

- **Product manual**, describes the technical data, installation, commissioning and all operating modes and operating functions.
- **Fieldbus manual**, important description of integrating the product into a fieldbus.
- Source product manuals The current product manuals are available for download from the Internet. <u>http://www.schneider-electric-moti</u>on.com

Additional literature We recommend the following literature for more in-depth information:

- Ellis, George: Control System Design Guide. Academic Press
- Kuo, Benjamin; Golnaraghi, Farid: Automatic Control Systems. John Wiley & Sons

### 1.7 Directives and standards

CE mark	With the declaration of conformity and the CE mark on the product the manufacturer certifies that the product complies with the requirements of all relevant EC directives.
EC Machine Directive	The drive systems described here are not machines as defined by the EC Machine Directive (98/37/EEC) but components for installation in machines. They do not have moving parts designed for specific purposes. However, they can be components of a machine or system.
	The manufacturer must certify that the complete system conforms to the machine directive with the CE mark.
EC EMC Directive	The EC Electromagnetic Compatibility Directives (89/336/EEC) applies to products that cause electromagnetic interference or whose operation may be be adversely affected by electromagnetic interference.
	Conformity with the EMC Directive can only be expected of drive sys- tems after correct installation in the machine. The information on ensur- ing electromagnetic compatibility given in the chapter on "Installation" must be followed to ensure that the drive system in the machine or sys- tem is EMC-compatible and that the product can legally be operated.
EC Low-Voltage Directive	The EC Low Voltage Directive (73/23/EEC) is not applicable to the com- pact drive, because it is operated with CD current under 50 V.
Declaration of conformity	The declaration of conformity certifies that the drive system complies with the specific EC directive.
Standards for safe operation	EN 50178: Fitting power systems with electronic equipment
	IEC 60204-1: Electrical equipment of machines, General requirements
	IEC 60034-ff: Rotating electrical machines
	IEC 61800-1: Variable-speed electrical drives
Standards for compliance with environmental conditions	IEC 60068-2-ff: Environmental tests
Standards for compliance with EMC limit values	IEC 61800-3: Variable-speed electrical drives

## **1.8 Declaration of conformity**

SCHNEIDER ELECTRIC MOTION DEUTSCHLAND GmbH & Co. KG Breslauer Str. 7 D-77933 Lahr				
	EC DECLARATION OF CONFORMITY YEAR 2008			
	<ul> <li>□ according to EC Directive Machinery 98/37/EC</li> <li>⊠ according to EC Directive EMC 2004/108/EC</li> <li>□ according to EC Directive Low Voltage 2006/95/EC</li> </ul>			
We declare that the Directives with res declaration becomes	e products listed below meet the requirements of the mentioned EC pect to design, construction and version distributed by us. This s invalid with any modification on the products not authorized by us.			
Туре:	ICIA N065			
Product number:	00180012xxxxx			
Applied harmonized standards,	EN 61800-3:2004, second environment			
especially:				
Applied national standards and technical specifications, especially:	Product documentation			
Applied national standards and technical specifications, especially:	Chneider Electric Motion Deutschland			
Applied national standards and technical specifications, especially: S Company stamp:	Product documentation chneider Electric Motion Deutschland GmbH & Co. KG Postfach 11 80 • D-77901 Lahr Breslauer Str. 7 • D-77933 Lahr /			
Applied national standards and technical specifications, especially: S Company stamp: Date/Signature:	Product documentation chneider Electric Motion Deutschland GmbH & Co. KG Postfach 11 80 • D-77901 Lahr Breslauer Str. 7 • D-77933 Lahr 28 November 2008			

### 2 Safety

### 2.1 Qualification of personnel

Only technicians who are familiar with and understand the contents of this manual and the other relevant manuals are authorised to work on and with this drive system. The technicians must be able to detect potential dangers that may be caused by setting parameters, changing parameter values and generally by the mechanical, electrical and electronic equipment.

The technicians must have sufficient technical training, knowledge and experience to recognise and avoid dangers.

The technicians must be familiar with the relevant standards, regulations and safety regulations that must be observed when working on the drive system.

#### 2.2 Intended use

The compact drive is a variable speed drive with a permanent-field electronically commutated motor, integrated control electronics and optional integrated gearing.

The drive is an OEM component and should be used in machines and systems in the configuration described.

The drive systems described here are products for general use that conform to the state of the art in technology and are designed to prevent any dangers. However, drives and drive controllers that are not specifically designed for safety functions are not approved for applications where the functioning of the drive could endanger persons. The possibility of unexpected or unbraked movements can never be totally excluded without additional safety equipment. For this reason personnel must never be in the danger zone of the drives unless additional suitable safety equipment prevents any personal danger. This applies to operation of the machine during production and also to all service and maintenance work on drives and the machine. The machine design must ensure personal safety. Suitable measures for prevention of property damage are also required.

In the system configuration described the drive systems must be used in industrial applications only and must have a fixed connection only.

In all cases the applicable safety regulations and the specified operating conditions, such as environmental conditions and specified technical data, must be observed.

The drive system must not be commissioned and operated until completion of installation in accordance with the EMC regulations and the specifications in this manual.

To prevent personal injury and damage to property damaged drive systems must not be installed or operated.

Changes and modifications of the drive systems are not permitted and if made all no warranty and liability will be accepted.

The drive system must be operated only with the specified wiring and approved accessories. In general, use only original accessories and spare parts.

The drive systems must not be operated in an environment subject to explosion hazard (ex area).

#### 2.3 Hazard categories

Safety notes and general information are indicated by hazard messages in the manual. In addition there are symbols and instructions affixed to the product that warn of possible hazards and help to operate the product safely.

Depending on the seriousness of the hazard, the messages are divided into three hazard categories.

### A DANGER

DANGER indicates an imminently hazardous situation, which, if not avoided, **will result** in death, serious injury, or equipment damage.

### A WARNING

WARNING indicates a potentially hazardous situation, which, if not avoided, **can result** in death, serious injury, or equipment damage.

### **A** CAUTION

CAUTION indicates a potentially hazardous situation, which, if not avoided, **can result** in injury or equipment damage.

#### 2.4 General safety instructions

#### A DANGER

#### Motor out of view

When the system is started the drives are generally out of the operator's view and cannot be visually monitored.

• Only start the system if there are no persons in the operating zone of the moving components and the system can be operated safely.

Failure to follow these instructions will result in death or serious injury.

	A WARNING				
Lo	oss of control				
•	Observe the accident prevention regulations. (For USA see also NEMA ICS1.1 and NEMA ICS7.1)				
•	The system manufacturer must take the potential error possibili- ties of the signals and the critical functions into account to ensure a safe status during and after errors. Some examples are: emer- gency stop, final position limitation, power failure and restart.				
•	The assessment of error possibilities must also include unex- pected delays and the failure of signals or functions.				
•	Suitable redundant control paths must be in place for dangerous functions.				
•	Check that measures taken are effective.				
Failure to follow these instructions can result in death or serious injury.					

### 2.5 Monitoring functions

The monitoring functions in the product protect the system and reduce the risks involved in a system malfunction. These monitoring functions are not sufficient for personal protection. The following errors and limit values can be monitored:

Monitoring	Task	Protective function
Data link	Error response in event of connection break	Functional safety and system protec- tion
Limit switch signals	Monitoring of permissible area of travel	System protection
Motor overload	Monitoring for excessively high current in the motor phases	Functional safety and device protec- tion
Overvoltage and under- voltage	Monitoring for overvoltage and undervoltage of the power supply	Functional safety and device protec- tion
Overtemperature	Monitoring device for overtemperature	Device protection
I <sup>2</sup> t Limit	Power limitation in event of overloading	Device protection

# 3 Technical Data

### 3.1 Environmental conditions

	When considering the ambient temperature a distinction is made be- tween the permissible temperatures during operation and the permissi- ble storage and transport temperature.					
ambient operating temperature	The maximum permissible ambient air temperature during operation de- pends on the clearance between the units and the required output. The relevant requirements in the chapter on installation are also very impor- tant.					
	Ambient temperature without power reduction	[°C]	+5 +40 class 3K3, DIN EN 60721-3-3			
Ambient climate for transport and storage	The environment during transport and storage must be dry and dust- free. The maximum oscillation and shock stress must be within the spec- ified limits. The bearing and transport temperature must remain within the specified range.					
	Storage temperature	-25 +55 class 1K4, DIN EN 60721-3-1				
	Transport temperature	-25 +70 class 2K3, DIN EN 60721-3-2				
Relative humidity	The relative humidity is allowed as follows:					
	Operation	[%]	5 85 class 3K3, DIN EN 60721-3-3			
	Storage	[%]	5 95 class 1K3, DIN EN 60721-3-1			
Installation height		[]				
	reduction	[m]	< 1000 m above sea level			
Oscillations and shocks						
	Oscillations, sinusoidal		in accordance with IEC/EN 60068- 2-6 0.35 mm (from 10Hz 60Hz) 50 m/s <sup>2</sup> (from 60Hz 300Hz)			
	Shocks, semisinusoidal		in accordance with IEC/EN 60068- 2-27 300 m/s <sup>2</sup> (for 18 ms)			

#### **Electrical and mechanical data** 3.2

#### 3.2.1 **Degree of protection**

*IP degree of protection* Degree of protection according to IEC 60034-5.

	In total, without shaft exit	Shaft exit
without gearing	IP65	IP41
with spur wheel gears	IP65	IP54
with angled wormgear	IP65	-

#### Overview of IP protection

Fi	rst digit	Se	Second digit						
Protection against foreign bodies			Protection against water						
0	no protection	0	no protection						
1	foreign body > 50mm	1	vertically falling drops						
2	foreign body > 12mm	2	diagonally falling drops (75° 90°)						
3	foreign body > 2.5mm	3	spray water						
4	foreign body > 1mm	4	splashing water						
5	dust-protected	5	jet water						
6	dust-proof	6	heavy sea						
		7	immersion						
		8	continuous immersion						

#### Service life 3.2.2

max. on-time	%	20
Service life at: 40°C ambient temperature operation with nominal current 20% on-time <sup>1)</sup>	h	3000
Service life at: 40°C ambient temperature operation in StandBy	h	80000

1) ca. 2 minute cycle time

#### 3.2.3 IcIA N065 DC024

#### Dimensions



Figure 3.1 Dimensions without gearing

#### Design data

	Size	Unit		
Nominal voltage	U <sub>DC</sub>	V	24	
Number of pole pairs	Р		2	4
Rated speed	n <sub>N</sub>	rpm	4350	
Nominal current	I <sub>N DC</sub>	А	3.79	
Ready-for-operation current	I <sub>0</sub>	А	0.09	
max. Phase current	î	А	6.0	
Torque constant	k <sub>M</sub>	Nm/A	0.036	
Nominal output	P <sub>N</sub>	W	71	
Nominal motor torque	M <sub>N</sub>	Nm	0.155	
Starting torque	M <sub>max</sub>	Nm	0.22	
Detent torque	M <sub>S</sub>	Nm	0.08	0.015
Moment of inertia	J <sub>R</sub>	g cm²	151	
Min. speed <sup>1)</sup>	n <sub>min</sub>	inc./s 1/min	60 300	30 75
max. Speed	n <sub>max</sub>	1/min	5000	
Positioning resolution		Inc./rev	12	24
Positioning resolution		0	30	15
Positioning accuracy		Inc.	±1	

	Size	Unit	
Mass	m	kg	0.8
1) from coffuero version V1 015			

from software version V1.015

Shaft load			
max. radial force 1)	Ν	80	
max. axial force pull	Ν	30	
Nominal bearing lifetime L <sub>10h</sub> <sup>2)</sup>	h	20000	

1) point of attack of radial shaft load: 12.5 mm distance from flange 2) operating hours at a probability of failure of 10%

#### Characteristic curves



Figure 3.2 Torque and flow characteristics IcIA N065 DC024



### 3.2.4 IcIA N065 V - with spur wheel gearing

Dimensions

Figure 3.3

Dimensions with spur wheel gear

	Size	Unit	V-007		V-018		V-038		V-054		V-115		
Nominal voltage	U <sub>DC</sub>	V	24	24 2			24		24		24		
Gear speeds	n <sub>G</sub>		2		3		3		4		4		
Ratio	I		430: 6	3	160: 9		75: 2		490: 9		3675:	32	
Number of pole pairs	Р		2	4	2	4	2	4	2	4	2	4	
Nominal speed <sup>1)</sup>	n <sub>N</sub>	rpm	4000	4000 4		4000		4000		4000			
Nominal current	I <sub>N DC</sub>	А	4.43		4.43		4.43		4.43		3.16		
Ready-for-operation cur- rent	I <sub>O</sub>	A	0.09		0.09		0.09		0.09		0.09		
max. Phase current	î	А	6.0		6.0		6.0		6.0		4.5		
Torque constant <sup>1)</sup>	k <sub>M</sub>	Nm/A	0.036		0.036		0.036		0.036		0.036		
Gear efficiency	ղ <sub>G</sub>		0.90		0.86		0.86		0.81		0.81		
Nominal output	P <sub>N</sub>	W	68		64		64		61		45		
Nominal output torque <sup>2)</sup>	M <sub>N</sub>	Nm	1.1		2.7		5.8		7.9		12.3		
Starting torque <sup>2)</sup>	M <sub>max</sub>	Nm	1.3		3.3		6.9		9.6		15.2		
Nominal output speed <sup>2)</sup>	n <sub>N</sub>	rpm	586	586		225		107		73		35	
Detent torque	M <sub>S</sub>	Nm	0.5	0.1	1.3	0.3	2.8	0.6	4.1	0.8	8.6	1.7	

Design data

	Size	Unit	V-007		V-018		V-038		V-054		V-115		
Moment of inertia 1)	J <sub>R</sub>	g cm²	151	151		151		151		151		151	
Moment of inertia <sup>2)</sup>	J <sub>R</sub>	kg m²	0.0007		0.0048		0.0212		0.0448		0.1992		
Min. speed <sup>2)3)</sup>	n <sub>min</sub>	1/min	44	11	16.9	4.2	8	2	5.5	1.4	2.6	0.7	
max. Speed <sup>2)</sup>	n <sub>max</sub>	1/min	733		281		133		92		44		
Torsional play <sup>2)</sup>		0	≤ 1.5		≤ <b>1</b> .0		≤ 1.0		≤ 1.0		≤ 1.0		
Positioning resolution <sup>1)</sup>		Inc./rev	12	24	12	24	12	24	12	24	12	24	
Positioning resolution <sup>2)</sup>		0	4.40	2.20	1.69	0.84	0.80	0.40	0.55	0.28	0.26	0.13	
Positioning accuracy <sup>1)</sup>		Inc.	±1		±1		±1		±1		±1		
Mass	m	kg	1.1		1.2		1.2		1.2		1.2		

1) with reference to motor shaft

with reference to gearing output shaft
 From software version V1.015

		V-007	V-018	V-038	V-054	V-115
Shaft load (short-time operation)						
max. radial force 1)	Ν	200	200	200	200	200
max. axial force	Ν	80	80	80	80	80
Nominal service life L <sub>10h</sub> <sup>2)</sup>	h	2500	2500	2500	2500	2500
Shaft load (continuous operation)						
max. radial force 1)	Ν	200	200	200	200	200
max. axial force	Ν	10	10	10	10	10
Nominal service life L <sub>10h</sub> <sup>2)</sup>	h	15000	15000	15000	15000	15000

point of attack of radial shaft load: 12.5 mm distance from flange
 operating hours at a probability of failure of 10%

#### Characteristic curves



Torque and flow characteristics IcIA N065 DC024 V-007 Figure 3.4



Figure 3.5 Torque and flow characteristics IcIA N065 DC024 V-018



Figure 3.6 Torque and flow characteristics IcIA N065 DC024 V-038



Figure 3.7 Torque and flow characteristics IcIA N065 DC024 V-054



Figure 3.8 Torque and flow characteristics IcIA N065 DC024 V-115



### 3.2.5 IcIA N065 U- with angled wormgear

Dimensions

Figure 3.9 Dimensions with angled wormgear

	Size	Unit	U-024	U-024 l		U-054		U-092		U-115	
Nominal voltage	U <sub>DC</sub>	V	24		24	24		24		24	
Gear speeds	n <sub>G</sub>		2	2		3		3		3	
Ratio	I		525: 22	525: 22		1715: 32		735: 8		3675: 32	
Number of pole pairs	Р		2	4	2	4	2	4	2	4	
Nominal speed <sup>1)</sup>	n <sub>N</sub>	rpm	4000	4000		4000		4000		4000	
Nominal current	I <sub>N DC</sub>	А	4.43		4.43	4.43		4.43		4.43	
Ready-for-operation current	Ι <sub>Ο</sub>	А	0.09		0.09	0.09		0.09		0.09	
max. Phase current	î	А	6.0	6.0		6.0		6.0		6.0	
Torque constant <sup>1)</sup>	k <sub>M</sub>	Nm/A	0.036		0.036	0.036		0.036		0.036	
Gear efficiency	η <sub>G</sub>		0.61		0.62	0.62		0.56		0.51	

#### Design data

	Size	Unit	U-024		U-054		U-092		U-115		
Nominal output	P <sub>N</sub>	W	46	46		47		42		39	
Nominal output torque 2)	M <sub>N</sub>	Nm	2.6		6.0		9.2		10.6		
Starting torque <sup>2)</sup>	M <sub>max</sub>	Nm	2.2	2.2			7.8		8.9		
Nominal output speed <sup>2)</sup>	n <sub>N</sub>	rpm	168		75		44		35		
Detent torque	M <sub>S</sub>	Nm	2.9	0.6	6.5	1.3	12.3	2.5	16.7	3.3	
Moment of inertia <sup>1)</sup>	J <sub>R</sub>	g cm²	165		150		150		150		
Moment of inertia <sup>2)</sup>	J <sub>R</sub>	kg m²	0.009		0.043		0.127		0.198		
Min. speed <sup>2) 3)</sup>	n <sub>max</sub>	1/min	12.6	3.1	5.6	1.4	3.3	0.8	2.6	0.7	
max. Speed <sup>2)</sup>	n <sub>max</sub>	1/min	189		93		54		44		
Torsional play <sup>2)</sup>		0	≤ 1.5		≤ <b>1</b> .0		≤ 1.0		≤ 1.0		
Positioning resolution <sup>1)</sup>		Inc./rev	12	24	12	24	12	24	12	24	
Positioning resolution <sup>2)</sup>		0	1.26	0.63	0.56	0.28	0.33	0.16	0.26	0.13	
Positioning accuracy <sup>1)</sup>		Inc.	±1		±1		±1		±1		
Mass	m	kg	1.7		1.7		1.7		1.7		

with reference to motor shaft
 with reference to gear output shaft

3) from software version V1.015

Shaft load		U-024	U-054	U-092	U-115	
max. radial force	N	200	200	200	200	
max. axial force	Ν	80	80	80	80	
Nominal service life L <sub>10h</sub> <sup>1)</sup>	h	9000	6000	6000	3000	

1) operating hours at a probability of failure of 10%

#### Characteristic curves



Torque and flow characteristics IcIA N065 DC024 U-024 Figure 3.10



Figure 3.11 Torque and flow characteristics IcIA N065 DC024 U-054



Figure 3.12 Torque and flow characteristics IcIA N065 DC024 U-092



Figure 3.13 Torque and flow characteristics IcIA N065 DC024 U-115

### 3.2.6 Electrical terminals

Power supply		
reverse-polarity-protected		
Nominal power supply range	Vdc	19.2 28.8 (permissible operating range)
Ripple at nominal voltage	V	≤ <b>3</b> .6
Inrush current	A	Load current for DC bus capacity (500 $\mu\text{F})$
24V signal interface		
4 signal inputs, 0VDC internally connected	with 0VDC supply voltage	e, reverse-polarity-protected
Permissible low level	V / mA	≤4.5 / ≤0.7
Permissible high level	V / mA	≥15/≥2
Admissible voltage range	V	030
Debounce time of signal inputs	ms	50 (in manual operation) Without debounce (reference movement switch and limit position sensors)
CAN fieldhus interface		
Signal inputs/outputs		according to ISO 11898 no galvanic isolation
Transmission rate	kBaud	
Transmission protocol	CANopen	Communication profile: DS301 V4.02
	o, aopen	Device Profile: DSP 402 V2.0
# 4 Installation

### 4.1 Electromagnetic compatibility, EMC

# A WARNING

#### Interference with signals and devices

Distorted signals can cause unpredictable device responses.

- Install the wiring in accordance with the EMC requirements.
- Check compliance with the EMC requirements, particularly in an environment subject to strong interference.

Failure to follow these instructions can result in death, serious injury or equipment damage.

# **A** WARNING

Danger from interference with signals and devices

This is a product with restricted availability under IEC 61800-3. It may cause radio interference in the domestic environment.

• Check compliance with the EMC requirements, particularly in an environment subject to strong interference.

Failure to follow these instructions can result in death, serious injury or equipment damage.

The drive and the system are subject to electromagnetic interference. If suitable precautions are not taken, the interference will affect the signals from the control lines and system parts and adversely affect the operating reliability of the system.

Before operation the electromagnetic compatibility of the system must be checked and assured. The drive system conforms to the requirements of the EC directives on EMC immunity to interference under IEC 61800-3 for the second environment where the following actions are taken into account during installation.

To maintain the limit values for the EMC interference resistance and interference radiation the drive must be earthed. It can be grounded from the motor flange or the electronics housing. This is generally done by bolting the motor to an electrically conductive and earthed machine component for sufficient earthing of the drive.

	EMC measures	Effect	
	Keep wiring as short as possible. Do not install "safety loops", short cables from the star point in the switch cabinet to outlying earth connection.	Avoidance of capacitive and inductive interference injection	
	The electronics case is electrically con- nected to the motor. Earthing drive through the motor flange. If this is not possible, pro- vide additional earth wire connected to the plug cover lid or with a cable clip to the flange. Note that in this case the drive will not be earthed when the cover is removed.	Reduce emissions, increase interference resistance	
	Earth shields on digital signal lines over a wide area at both ends or via conductive plug housing.	Preventing interference on control cables, reduction of emissions	
	Connect large surface areas of cable shields, use cable clamps and tapes	Reduction of emissions.	
	Table 4.1 EMC measures		
Equipotential bonding conductors	The shields are connected at both ends for fault protection. Potential dif- ferences can result in excessive currents on the shield and must be pre- vented by equipotential bonding conductor cables.		
	If lines over 100 m are approved, the following applies: up to 200 m		

If lines over 100 m are approved, the following applies: up to 200 m length a cable cross section of 16 mm<sup>2</sup> is sufficient, for greater lengths a cable cross section of 20 mm<sup>2</sup> is required.

### 4.2 Mechanical installation

# **A** CAUTION

#### Failure of the drive by mechanical damage

If the maximum allowable forces on the shaft are exceeded, this will result in accelerated bearing wear or shaft breakage.

- Do not exceed the maximum allowable axial and radial forces.
- Protect the shaft against impact.
- Do not exceed the maximum allowable axial force even when pressing on output components.

Failure to follow these instructions can result in injury or equipment damage.

### 4.2.1 Mounting

Check the drive for externally visible damage such as faulty terminal clamps or damage to the housing. Do not install damaged devices.

The compact drive must be fixed with four bolts.

- Install the drive on a flat horizontal surface to prevent transmission of mechanical tension to the housing.
- ► Tighten the flange bolts with spring washers to prevent twisting.

The compact drive becomes hot during operation. Do not enclose the drive in a heatproof enclosure.



Figure 4.1 Mechanical load

*Load* Support a flanged spindle or shaft with suitable bearings if it is subject to high transverse or axial forces.



Figure 4.2 Mechanical load

The maximum permissible stress for the various unit types are listed in 3.2 "Electrical and mechanical data".

Differentiation by protection classes

If the shaft exit is dust and waterproof, the drive can be installed in an environment corresponding to IP65.

### 4.3 Electrical installation

### **A** WARNING

#### Interference with signals and devices

Distorted signals can cause unpredictable device responses.

- Install the wiring in accordance with the EMC requirements.
- Check compliance with the EMC requirements, particularly in an environment subject to strong interference.

Failure to follow these instructions can result in death, serious injury or equipment damage.

#### 4.3.1 Overview of all connections

The following figure shows all connections in overview.



Figure 4.3 Unit connections

- Signal interface, connection for:
  - Supply voltage
  - Control signals (manual operation)
  - Limit switch signals (fieldbus operation)
  - Enable signal
  - Braking Resistor Controller
- Equipotential bonding for grounding via PE busbar
- CAN fieldbus interface

Connect prepared and tested cables only.

### 4.3.2 Equipotential bonding connection

The shields are connected at both ends for fault protection. Potential differences can result in excessive currents on the shield and must be prevented by equipotential bonding conductor cables.

The compact drive is connected to ground potential via equipotential bonding.



Figure 4.4 Equipotential bonding connection

Cable specifications If lines over 100 m are approved, the following applies: up to 200 m length a cable cross section of 16 mm<sup>2</sup> is sufficient, for greater lengths a cable cross section of 20 mm<sup>2</sup> is required.
 Connecting cable
 ► Fasten the equipotential bonding cable to the equipotential bonding connection of the compact drive with the screw.

The included M4x6 fillister head screw is self-locking.

Use the safety contact cable with cable lug,  $\emptyset$ 4.5 mm.

 Connect the bonding conductor to the central PE busbar or the central protective conductor terminal of the machine.

### 4.3.3 Overview signal interface

## **A** WARNING

#### Risk of injury or damage to the drive

With a short circuit of the signal CHOPPER against 0VDC the supply voltage is also short-circuited against 0VDC.

• Run the wiring as specified.

# Failure to follow these instructions can result in death, serious injury or equipment damage.

The signal interface is a 9-pin Sub-D plug with UNC fasteners, degree of protection IP65.



Figure 4.5 Sub-D connector

Pin	Signal	Description	I/O
1	MAN_0V	Reference potential at MAN_P and MAN_N	-
	REF	Reference switch (normally open contact <sup>1)</sup> )	I
2	ENABLE	Activating and deactivating the power amplifier	I
3	MAN_N	Jog counterclockwise rotation	I
	LIM_N	Negative limit switch (normally closed contact <sup>1)</sup> )	I
4	MAN_P	Jog clockwise rotation	I
	LIM_P	Positive limit switch (normally closed contact <sup>1)</sup> )	I
5	CHOPPER	Connection braking resistor controller	А
6	0VDC	Reference potential	-
7	0VDC	Reference potential	-
8	24VDC	Supply voltage 24VDC	-
9	24VDC	Supply voltage 24VDC	-

1) at factory setting

Connectors for manufacture of a connector cable for environmental conditions corresponding to IP65 can be found in the accessories list in chapter 8 "Accessories and spare parts".

### 4.3.4 Supply voltage connection 24VDC

### **A** DANGER

#### Electric shock from incorrect power supply unit

The supply voltage 24VDC is connected with many accessible signals in the drive system.

- Use a power supply unit that meets the requirements for PELV (Protective Extra Low Voltage)
- Connect the negative output of the power supply unit to PE.

Failure to follow these instructions will result in death or serious injury.

### **A** CAUTION

Destruction of system components and loss of control monitoring

Excessive currents can be created at the signal connections if the negative connection to the controller supply voltage is interrupted.

- Do not interrupt the negative connection between power supply unit and load with a fuse or switch
- Check for correct connection before switching on.
- Never connect the controller supply voltage or change its wiring while there is supply voltage present.

Failure to follow these instructions can result in injury or equipment damage.

# CAUTION

#### **Destruction of contacts**

The connection for the controller supply voltage at the drive system does not have a make current limit. If the voltage is switched on by switching contacts, the contacts may be destroyed or welded shut.

- Use a power supply unit that limits the peak value of the output current to a value permissible for the contact.
- Switch the line input of the power supply unit instead of the output voltage.

#### Failure to follow these instructions can result in equipment damage.

The compact drive is operated at a supply voltage of +24V direct voltage. The voltage is fed through the Sub-D plug connector.

A three-phase transformer with a three-phase rectifier can be used as a power source. A charging capacitor is not required.

A residual ripple of a maximum of 3.6V at the nominal voltage is required for operation of the drive.



Figure 4.6 Power supply of the compact drive

Cable specifications

Connecting cable

Cross section 2 x 0.75 ... 1.5 mm<sup>2</sup>

Unshielded cables may be used for the  $24 \mbox{VDC}$  supply voltage. Twisted pair is not required.

- ▶ Use pre-assembled cables to minimise the risk of a wiring error.
- Make sure that the wiring, the cables and the connected interfaces meet the requirements for PELV.
- Connect the connections of the Sub-D plug connector to the power supply:
  - Connect the reference potential (0VGND) of the supply voltage to a point on PE.
  - ► Fuse the 24VDC cable according to the selected cable cross-section, at least however with 6A.

If multiple drives are powered from one 24VDC power supply unit, take the following applications of the drives into account when dimensioning the power supply unit and the wiring. If multiple drives are operated simultaneously, this increases the terminal power required for the power supply unit.

Additional consumers must not be connected to pins 6, 7 and 8, 9. Cascade the drives using multi-terminal busbars.

Lay the 24VDC supply line at a distance of at least 20cm from other lines to ensure EMC protection. For wiring longer than 2m make a twisted pair of the 0V and 24VDC supply wires.

#### 4.3.5 Connection control inputs

The signal interface can be configured as a "Standard Interface" or as a "Sensor Interface".

Connection "Standard Interface"

Connecting pushbuttons with "Standard Interface".



Figure 4.7 Connection "Standard Interface"

Connection "Sensor Interface"

Connecting limit switches with "Sensor Interface".



Connect the connections of the signal interface to the buttons or

Figure 4.8 Connection "Sensor Interface"

Cross section 0.25mm<sup>2</sup> to 1.5mm<sup>2</sup>

limit switches respectively.

Cable specifications

Connecting cable



►

When commissioning you can use the commissioning software to switch between "Standard Interface" and "Sensor Interface" (parameter group "Drive data", parameter "Interface option type").

maximum length with minimum cross-section 15 m

### 4.3.6 Connection Enable

If the enable signal voltage is interrupted, the Kompaktantrieb is shut down.



#### 4.3.7 Fieldbus connection

circular plug-in connector, assignment of input plugs

The compact drive is connected to the CAN fieldbus with the circular plug-in connector, 5-pin model.



Figure 4.10 CAN fieldbus connection (input plug)

Pin	Signal	Description
1	CAN_SHLD	Shielding, PE connection
2	-	not assigned
3	CAN_0V	CAN ground
4	CAN_H	Data wire, dominant high
5	CAN_L	Data wire, dominant low

Circular plug-in connector, assignment of output socket

The compact drive has a second circular plug-in connector, 5-pin model, for networking the CAN fieldbus. Additional network devices can be connected here.



Figure 4.11 CAN fieldbus connection (output socket)

Pin	Signal	Description
1	CAN_SHLD	Shielding, PE connection
2	-	not assigned
3	CAN_0V	CAN ground
4	CAN_H	Data wire, dominant high
5	CAN_L	Data wire, dominant low

Accessories for networking

Cable connectors, terminal blocks and terminating resistors for the compact drive can be found in the accessories list in chapter 8 "Accessories and spare parts".

- Connecting cable
- Connect the fieldbus cable to the circular plug-in connector (input connector) of the compact drive. If no other devices are to be connected, the second circular plug-in connector (output socket) must have a terminating resistor.

Otherwise a t-piece or a plug with two cable outputs can be connected to the input connector to connect adjacent fieldbus devices. The output socket must not be wired with a terminating resistor in this case.

Install the t-piece on the compact drive without a drop line.

The two open ends in the CAN fieldbus must be connected with a  $120 \Omega$  resistor.

The maximum cable length of a CAN network depends on the baud rate at which the network is to be operated. The higher the baud rate, the shorter the bus cable needs to be.

Baud rate [Kbd]	Cable length [m]	Baud rate [Kbd]	Cable length [m]
1000	25	100	600
800	50	50	1000
500	100	20	2500
250	250	10	5000

The following example shows the networking of four compact drives with a PLC.



Figure 4.12 Networking of four compact drives with a PLC

### 4.3.8 Connection Braking Resistor Controller

A braking resistor controller can be connected to the signal CHOPPER. A braking resistor controller is required if the supply voltage gets too high due to reverse feeding.



Figure 4.13 Connection Braking Resistor Controller

Cable specifications

Connecting cable

- Cross section 0.75 ... 1.5 mm<sup>2</sup>
- Connect the Sub-D connector to the input of the braking resistor controller.

IMPORTANT: The signal CHOPPER may only be connected directly to the input of the braking resistor controller.

Several compact drives can not be connected directly to a braking resistor controller.



If you have any questions please contact your local dealer. Your dealer will be happy to give you the name of a customer service outlet in your area.

### 4.3.9 Checks

	A WARNING
	Unexpected movement
	When the drive is operated for the first time there is a high risk of un- expected movements because of possible wiring errors or unsuitable parameters.
	• If possible, run the first test movement without coupled loads.
	Make sure that a functioning button for EMERGENCY STOP is within reach.
	• Also anticipate a movement in the incorrect direction or oscillation of the drive.
	• Make sure that the system is free and ready for the movement before starting the function.
	Failure to follow these instructions can result in death, serious injury or equipment damage.
System checks and test	Carry out these checks:
	Are all cables and connectors safely installed and connected?
	Are any live cable ends exposed?
	Are the control lines connected correctly?
	For this test and the first stages of commissioning the motor should be run decoupled from the system. This prevents damage to motor and system if the motor starts unexpectedly or by incorrect referencing marks.
	Switch on the 24V <sub>DC</sub> power supply. The drive runs a self-test and switches to manual operation mode.
Manual movement test	If the drive is referenced and the signal connections are wired for manual mode, the function of the drive can be tested in manual mode. The motor cannot move without valid reference values. The drive can only be referenced over the fieldbus.
	<ul> <li>Switch the manual movement signals for clockwise and anti-clock- wise rotation to low level.</li> </ul>
	If MAN_P is wired, the shaft rotates clockwise when viewed towards the face of the driven shaft. The supply voltage and manual move- ment signals are then correctly wired.
Testing fieldbus wiring	With the power off measure the resistance between CAN_L and CAN_H.
	If the measured value with both terminating resistors is 600hm, the network is correctly wired and connected.

# 5 Commissioning

### 5.1 General safety instructions

# **A** CAUTION

#### Hot Surfaces

Depending on the operation the surface may heat up to more than 100°C (212°F).

- Prevent contact with the hot surfaces.
- Do not install flammable or heat-sensitive components in the immediate vicinity.
- Follow the actions described for heat dissipation.
- Check the temperature during the test run.

Failure to follow these instructions can result in injury or equipment damage.

# A WARNING

#### **Unexpected movement**

When the drive is operated for the first time there is a high risk of unexpected movements because of possible wiring errors or unsuitable parameters.

- If possible, run the first test movement without coupled loads.
- Make sure that a functioning button for EMERGENCY STOP is within reach.
- Also anticipate a movement in the incorrect direction or oscillation of the drive.
- Make sure that the system is free and ready for the movement before starting the function.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### **A** WARNING

#### **Unexpected behaviour**

The behaviour of the drive system is governed by numerous stored data or settings. Unsuitable settings or data may trigger unexpected movements or reactions to signals and disable monitoring functions.

- Do not operate a drive system with unknown settings or data.
- Check the stored data or settings.
- When commissioning carefully run tests for all operating statuses and fault cases.
- Check the functions after replacing the product and also after making changes to the settings or data.
- Only start the system if there are no persons or materials in the danger zone and the system can be operated safely.

Failure to follow these instructions can result in death, serious injury or equipment damage.

# A WARNING

#### **Unbraked motor**

In the case of power failure and faults which cause the power amplifier to be switched off, the motor is no longer controlled by the brake and increases its speed even more until it comes to a mechanical stop.

- Check the mechanical situation.
- If necessary, use a cushioned mechanical stop or a suitable brake.

Failure to follow these instructions can result in death, serious injury or equipment damage.

### A WARNING

#### **Rotating parts**

Rotating parts may cause injuries and may catch clothing or hair. Loose parts or parts that are unbalanced may be thrown clear.

- After mounting check all rotating parts (parallel keys, coupling, ..).
- Use a cover as protection against rotating parts.

Failure to follow these instructions can result in death, serious injury or equipment damage.





When commissioning you can use the commissioning software to switch between "Standard Interface" and "Sensor Interface" (parameter group "Drive data", parameter "Interface option type").

### 5.2 Commissioning procedure

The steps for commissioning and parameterising the operating modes and functions over the fieldbus are described in the fieldbus manual for the compact drive.



The following commissioning steps are also required if you are using a configured unit under changed operating conditions.

# 5.3 Commissioning software ICCT

Features	The commissioning software simplifies commissioning, parameterisa- tion, simulation and diagnostics.		
	It provides extensive options such as:		
	Graphic interface for parameter setting and status display		
	Extensive diagnostic tools for optimisation and maintenance		
	Long-term recording as an aid to assessing operating behaviour		
	Testing input and output signals		
	<ul> <li>Tracking signal sequences on the monitor</li> </ul>		
	Archiving all device settings and recordings with export functions for data processing		
Requirements	PC or laptop with Windows 2000 or later		
	Converter for fieldbus connection to PC		
	Product manual: Commissioning software ICCT		
Converter	You require a converter to connect the product to the PC. The following converters are recommended:		
	<ul> <li>"USB-to-CAN compact", www.ixxat.com</li> </ul>		
	<ul> <li>"PCAN-USB", www.peak-system.com</li> </ul>		
Source commissioning software	The latest version of the commissioning software is available for down- load from the internet:		

http://www.schneider-electric-motion.com

### 5.3.1 Firmware update over fieldbus

	▲ CAUTION	
	Damage to the product from failure of the supply voltage	
	If the supply voltage fails during an update, the product will be dam- aged and must be sent in for repair.	
	Never switch off supply voltage during the update.	
	Always carry out the update with a reliable supply voltage.	
	Failure to follow these instructions can result in injury or equip- ment damage.	
Finding the firmware version	The firmware number and the firmware version of your drive can be found with the commissioning software by opening the device information window.	

# 5.4 Difference between the controller objects of D065 and N065

The controller objects of the D065 (Object  $2010_h$ Control Parameter Set) are not compatible with the controller objects of N065. Thus 1 to 1 use is not possible.

The behaviour of the N065 when using the factory settings shows virtually identical behaviour to the D065 when using the factory settings. Retrospectively changed controller objects have to be reset for the N065.

D065 Object (Index <sub>h</sub> :Subindex <sub>h</sub> )	N065 Object (Index <sub>h</sub> :Subindex <sub>h</sub> )
KP_Pos (2010:01)	no equivalent
KP_Rpm (2010:02)	Gain (60F9:01)
KP_Cmd (2010:03)	KP_Cmd (60F9:09)
RI_Lag (2010:04)	IntegrationTimeConstant (60F9:02S)
PositionWindow (2010:05)	PositionWindow (6067:00)
RpmWindow (2010:06)	VelocityWindow (606D:00)
RpmDeviationEvents (2010:07)	VelocityWindowTime (606E:00)
RpmStartTimeout (2010:08)	StartUpTimeout (60F9:03)
RpmStop (2010:09)	no equivalent
LP1_TimeConst (2010:0A)	LP1_TimeConstant (60F9:08)
HoldingTorqueTime (2010:0B)	HoldingTorqueTime (60FB:01)
MaxSteadyCurrent (2010:0C)	no equivalent
StartingCurrentFactor (2010:0D)	AccelerationCurrentFactor (60F9:05)
DeviationDelay (2010:0E)	ConstantDriveDelay (60F9:04)
CurrentDeviationEvents (2010:0F)	MaxCurrentEvents (60F9:06)
Current window (2010:10)	no equivalent
BlockDeceleration (2010:11)	BlockDeceleration (60F9:07)

The following objects have been replaced by new objects.

Some of the new objects have a different scale.

The meaning of the individual objects is described in the relevant fieldbus manual.

# 6 Operation

### 6.1 Operating modes

The compact drive operates with seven operating modes:

Operating modes	with fieldbus	without fieldbus
Manual operation via signal inputs MAN_N and MAN_P	x	x
Manual operation via CAN bus (simulated manual mode)	x	-
Homing	x	-
Positioning mode	х	-
Speed control mode	х	_
Configuration mode	х	-
Manufacturer-specific positioning mode (manufacturer-specific travel profile)	x	-

After switching on the supply voltage, the compact drive automatically switches to manual operation. The drive can be switched to fieldbus controller via the fieldbus.



Figure 6.1 Operating modes of the Kompaktantriebs

Manual operation via signals

In manual operation the Kompaktantrieb moves at an adjustable speed within the referenced working range. The direction of movement and the jog operating mode or continuous operation are preset by two signal inputs.

Manual operation via fieldbus

In manual operation via fieldbus the Kompaktantrieb can also be moved clockwise or anticlockwise within the reference range. The direction of motion and the speed are specified over the fieldbus.

Homing	The compact drive must be referenced for manual or positioning mode. The homing specifies three limit switch points for every direction of mo- tion. The drive monitors them continuously for overshoot. A homing is also retained after switching the compact drive off and on if they were not rotated when the power was off.
Positioning mode	In positioning mode the referenced drive can be moved from a point A to a point B. A trapeze profile is specified; application-specific trapeze pro- files with values for final speed and acceleration and deceleration ramps can be saved in nine additional parameter sets.
Speed control mode	In speed control mode movement commands are processed via the fieldbus. In this operating mode the drive requires homing if the software limit switches are used. The function of the software limit switches can be disabled by setting parameters of all software limit switches to the minimum or maximum range limits. The drive can then be moved in speed control mode without homing.
	The reference value of a movement command is the set speed of the drive movement. The acceleration and braking ramp is parameterised and can be adjusted for the specific application.

### 6.2 Functions

Communication configurationCommunication parameters of the compact drive can be set for data exchange over fieldbus.In the CANopen network the parameters baud rate and node number<br/>can be modified via the LSS service (layer setting services).Configuration modeParameter values of the compact drive can only be set via the fieldbus.<br/>The configuration mode offers the option of adjusting the compact drive<br/>for the operating conditions.



0098441113268, V2.00, 12.2008

60

### 6.3 Protection and monitoring functions



Figure 6.3 Enable function and monitoring function

#### 6.3.1 Enable function

The enable function is triggered via a fieldbus command or alternatively by interrupting the enable control signal. The current travel command is cancelled in different ways.

In the case of the fieldbus command an error flag is set and the motor is brought to a standstill with the Quick Stop ramp.

The interruption of the enable control signal triggers a time-delayed deactivation of the power electronics. The drive is braked at maximum power. After elapse of the delay time the power electronics are disabled. The error flag is set.



Moving loads are not permitted when using the enable function, e.g with Z-axes, because the drive is actively braked for just one second after enabling the enable control signal. A continuing application with a moving load may result in unwanted drive movements.

The compact drive remains at a standstill until the external control resets the enable status.

### 6.3.2 Monitoring functions of the motor controller

Various operating functions provide protection against damage and malfunctions. This includes:

- Self-test at Power On (start diagnosis of the integrated electronics)
- · Data backup when the supply voltage is switched off
- Current limiting
- Overload
- Voltages
- Temperature
- Starting error
- Deviation in rpm
- Block movement
- Commutation/Hall sensor error
- Outside acceleration
- Electronic log-book
- Watchdog (program process monitoring)

#### 6.3.2.1 Self-test at Power On

After Power On the application program calls the initialisation routine of the motor management system, where a self-test of the following functions is run.

- · Timer and oscillator
- Configuration memory (consistency of the non-volatile data in the EEPROM)
- Combination of the Hall sensors
- Motor current
- DC bus and auxiliary voltage
- Temperature of the power electronics
- Wire break (functional readiness of the Enable hardware)
- Check historical watchdog
- Test for dereferencing

With the error a corresponding error flag is set in the drive status register.

A distinction can be made between reversible and non-reversible (fatal) errors, which must be treated differently.

The fatal errors include EEPROM errors (loss of data and movement log-book), Enable self-test errors, watchdog errors and timer and oscillator errors. In these cases the system is held in an endless loop to prevent activation of an invalid operating status. After Power On the drive simply sends a BootUp message and the assigned error message. Otherwise the system shows no outside response. Only a manufacturerspecific host system can detect this status. The user should send drive systems with the error type described above in for closer examination. In the case of the reversible self-test errors the system branches into the basic loop. The motor controller is not enabled; an error message is sent over the bus interface.

If the supply voltage fails the run-time data are written to the configuration memory (Power Fail Save). The primary data are the position of the drive in the position memory (position counter) and the current rotor position. The voltage monitor detects the Power Down, stops the motor and initialises the Power Fail Save sequence. The data are written to the configuration memory as soon as the drive is at a standstill in the event of a Power Down:

- Position counter (current position in the position memory)
- Hall combination (to detect mechanical displacement)
- Status register (controller status at Power Down)
- Log-book (operating hours, etc.)

A validity bit is set in the configuration memory at Power Down to test the validity of the run-time data. The validity bit is read from the configuration memory at the next Power On and reset there immediately, i.e. the run-time data in the configuration memory are flagged as invalid.

If the validity bit is not set at Power On, the last backup of the run-time data did not work. The run-time data in the configuration memory do not refer to the last Power Fail Save; this has the following consequences:

- the position counter is invalid: the drive must be referenced again,
- the Hall combination is invalid: the drive must be referenced again,
- the status registers are invalid: insignificant, because it is historical
- the log-book is invalid: the data must be reconstructed.

#### 6.3.2.2 Current limiting

If the motor phase current reaches the maximum value that can be set by the user, it is limited by the electronics. The warning flag "current limiting" is set in the status register.

#### 6.3.2.3 Overload

The overload is calculated by the I<sup>2</sup>t method. If the calculated motor phase current exceeds the value of the permissible continuous current for a specified time, the drive is stopped and the error flag "overload" is set. The time until enabling the error depends on the height of the measured current.

#### 6.3.2.4 Voltages

The three parameters power supply, DC bus and auxiliary voltage are continuously measured, filtered and compared with limit values. Various actions may follow depending on the type of voltage.

	Power supply	DC link	Auxiliary voltage
Overvoltage (>20%)	Warning flags are set in status word and status register,	Warning flags are set in status word and status register,	Warning flags are set in status word and status register,
	no error message (EMCY)	no error message (EMCY)	no error message (EMCY)
Overvoltage (illegal range e.g. by mov-	-	Error flag, braking ramp is delayed,	-
ing load)		power electronics switch off, out- put of assigned error message (EMCY)	
Undervoltage (<20%)	Warning flags are set in status word and status register,	Warning flags are set in status word and status register,	Warning flags are set in status word and status register,
	no error message (EMCY)	no error message (EMCY)	no error message (EMCY)
Undervoltage (Fail Safe)	Error flag, motor at maximum braking, data backup,	Error flag, motor at maximum braking, data backup,	-
	output of assigned error message (EMCY)	output of assigned error message (EMCY)	

### The measured values can be read out over the field bus interface 6.3.2.5 Temperature The temperature of the motor electronics are continuously measured and evaluated. If the warning threshold is exceeded the warning flag is set in the status register. If the shut-down threshold is exceeded the error flag is set, the motor is braked at the Quick-Stop ramp and the error message assigned to the overtemperature error is output. When the motor is at a standstill the power electronics are switched off. If the temperature falls below the configured reset threshold, the motor controller can be enabled via the application program. The temperature of the power electronics can be queried via the CAN bus. The values for overtemperature and reset threshold are saved in the configuration memory of the drive and can be queried over the bus interface (electronic data sheet). 6.3.2.6 Starting error If the motor does not start within a configurable time, the power electronics are switched off and an error flag is set. The system waits for a new movement command. The system continues to remain in the "ready" status and can process new movement commands. 6.3.2.7 Speed deviation If the control deviation of the speed of rotation exceeds a defined limit value after completion of the acceleration phase in the range of constant setpoint speed, the speed deviation error flag is set. The sped deviation

does not indicate an error in all cases; incorrect selections, such as excessively low current setpoints, could also be the cause.

#### 6.3.2.8 Block movement

If the speed of rotation falls by a configurable value within a permanently defined period and the current limiting is active at the same time, a block movement is detected. It is displayed by a corresponding entry in the error flag.

#### 6.3.2.9 Commutation/Hall sensor errors

The motor electronics check the measuring signals for determination of the rotor angle (Hall signals) for plausibility. If an error in a signal is detected, it is shown by an error flag.

#### 6.3.2.10 Outside acceleration

Various functions protect the drive from damage resulting from outside acceleration.

Two different operating states must be distinguished.

 During a positioning process a moving load is applied to the output during braking. Because the drive is actively braking in this phase, a component of the braking energy is fed to the DC bus circuit, which increases the voltage.

The drive responds to rising voltage values in three stages: generation of a warning flag, reduction of the braking ramp and finally by switching off the power electronics, which is acknowledged by the error message "overvoltage" (see section 6.3.2.4 "Voltages").

- The drive is accelerated out of standstill by an outside force to displace is manually. If the drive is accelerated past the maximum permitted speed of rotation specified in the electronic data sheet, it may be damaged by the high induced voltage.
  - If the drive is connected to a power supply and there is no Enable signal, the drive is protected against overvoltage by a short-circuit braking. The short-circuit braking is tripped if the permissible maximum speed is exceeded by 25%.

If the Enable signal is active and the power electronics are disabled, the protective function is also disabled. The drive will then be damaged if the maximum speed is exceeded.

 If the drive is not connected to a power supply, there is no protection against overload by an auxiliary drive.

#### 6.3.2.11 Electronic log-book

The following data are recorded in the electronic log-book:

- Uptime of the drive
- Active time of the drive
- Number of positionings
- Number of reference losses
- Number of log-book losses

The log-book is continuously updated during the operating time and written to the configuration memory on Power Down.

Because a loss of run-time data and also the log-book cannot be completely prevented on Power Down, a second log-book is also maintained. It is periodically written to the configuration memory during operation. The log-book can be reconstructed from the second log-book after a loss of run-time data. The data error during the time counters is less than a backup period in this case.

#### 6.3.2.12 Watchdog

The Watchdog timer is a monitoring mechanism for responding to hardware faults and "software hang-ups". The Watchdog timer is enabled at Power On and must be serviced cyclically by the software (Watchdog Servicing).

If the Watchdog Servicing fails, the microcontroller performs a Watchdog reset. The systems runs the Power On self-test and the initialisation phase. The motor controller is not enabled. An error message is set via the bus interface.

This status can only be reset by a hardware reset (switching off the supply voltage). This is a non-reversible error. Drives with this error type should be sent in for closer examination.

# 7 Diagnostics and troubleshooting

### 7.1 Fieldbus communication error diagnosis

Field-mode must be functioning to be able to evaluate operational and error messages. The Kompaktantrieb can only exchange messages via the fieldbus.

*Connections to field-bus mode* If the drive cannot be addressed over the field bus, first check the connections. Kompaktantriebcompact drive contains the technical data on the device and information on network and device installation. Check the following:

- 24V power supply
- Power connections to the device
- Fieldbus cable and wiring
- Network connection to the device

Function test on the fieldbus

If the Kompaktantrieb is connected up correctly then test field bus operation. This requires installation of a CAN monitor that displays CAN messages. Acknowledgement of the drive is captured by a boot-up message:

- Switch the drive power supply off and on again.
- Observe the network messages shortly after switching on the device. The Kompaktantrieb sends a 1-byte long boot-up message after bus initialisation: 1792 (700<sub>h</sub>)+node ID.
- With the node address factory setting to "127" (7Fh), the boot-up message "2047" (77Fh) is sent over the bus. The drive can then be put into operation via LSS and NMT services.

If no boot-up message is received on the network after switching on the drive, first check whether the baud rate of the CAN monitor matches the set baud rate in the network.



If network operation cannot be started, the network function of the device must be checked by your local representative. Contact your local representative.

Baud rate and address

If a connection to a device cannot be made, check the baud rate and node address.

- The baud rate of all network devices must be set to the same value
- The node address of every device must be between 1 and 127 and must be different for every device.

The default baud rate is 20 kbps. The default address is 127.

The baud rate and node address for the Kompaktantrieb can be set with LSS services, see CANopen manual, "LSS services in the positioning drive".

### 7.2 Error diagnosis over fieldbus

#### 7.2.1 Message objects

Several objects provide information on the operation and error status of the Kompaktantriebs:

- Object <code>Statusword (6041\_h)</code> operating statuses which are reported over the status word are described in the CANopen manual in the chapter "Operating statuses and operating modes".
- Object EMCY(80<sub>h</sub>+ node-Id) error message of a user with error status and fault code; see CANopen manual, chapter "Emergency service".
- Object Manufacturer status register  $(1002_h)$ operation and error status of the device components, this is where the manufacturer-specific message on the Kompaktantrieb are stored. The object remains set after an error status until a new positioning order is executed or the original source of the malfunction is removed. Detailed information on this can be obtained from the following 7.2.2 "Messages on the device status"chapter.
- Object Error register  $(1001_h)$ shows the error status of a device in bit-coded form. The exact cause of error must be determined with the error code table. Bit 0 is set as soon as an error occurs.

Bit	Message	Description
0	generic error	An error has occurred
1	current	The parameterised range limits of the maxi- mum motor current or the I2t monitoring were exceeded
2	voltage	Detection of overvoltage or undervoltage for the internal auxiliary voltage (12V), supply voltage or DC bus voltage
3	temperature	The maximum permissible limit temperature was exceeded (internal measurement)
4	communication error	Error in the network communication
5	device profile-specific	Error during execution of the command according to device profile (e.g. block move- ment)
6	reserved	Reserved
7	manufacturer-specific	Manufacturer-specific error message (e.g. external torque)

- Object Error  $code(603F_h)$ The error code is analysed by the object error code( $603F_h$ ), an object of the device profile DSP 402 and is issued as a 4-digit hexadecimal number. The error code shows the cause of the last interruption of movement. The meaning of the error code can also be found in the CANopen manual in the section on error diagnosis and troubleshooting.
- Object Predefined error field (1003<sub>h</sub>) error memory contains the last five occurring errors as an error code in chronological order.

• Devices use the special SDO ABORT error message to report the failed message exchange via SDO (abort)

Validates transmitted LSS services "Transmitting acknowledgement information" or an error code. The meaning of the feedback message to each LSS service is described in the CANopen manual, chapter "Basics".

#### 7.2.2 Messages on the device status

The 32 bit object "Manufacturer status register"  $(1002_h)$  of the engine operating programme is the central register of engine interface.

Bits 24 - 31 inform about the operating status of the engine control.

Bits 0 - 22 inform about the error status of the various monitoring functions.

Errors occurring can be analysed in detail via bits 0 - 23

Operation and error messages indicate the drive bitcoded.

For error analysis and handling purposes one differentiates between reversible and fatal errors as well as note messages.

*Warning (Warn)* A Warning (object  $1002_{h}$ /Bit30) indicates that the drive is in a critical but not yet operation-endangering condition (value = 1). The exact origin of the problem is stored in bits 23 to 0 of the status register (object  $1002_{h}$ ).

The warning bit and the bit(s) which indicate the origin of the problem remain until a new travel command is discharged, that is possible origins of problems can also be called up after completing a travel command.

*Reversible error (Rev)* If the drive detects a reversible error, it sends an EMCY message over the fieldbus and stops the current movement operation. After the error has been corrected, the error message must be acknowledge via bit 7, Reset fault in the control word Controlword (6040<sub>h</sub>).

In the event of a reversible error bit 7 in the object <code>Statusword</code> (6041<sub>h</sub>) and bit 30 in the object manufacturer status register (1002<sub>h</sub>) are set.

- *Fatal error (fatal)* A fatal error occurs when the internal device test detects hardware or software errors. The motor controller is blocked; the block can only be reset by switching the drive off and on again.
  - The drive sends an EMCY message.
  - *Message* The entry "Info" in the column ""Type of message"" indicates that a note was issued without interruption of the currently running movement mode.

The following table shows the bit values of the object  ${\tt Manufacturer}$  status register (1002\_h).

Bit	Designa- tion	Possible cause for the message	Type of message	Remedy	EMCY message
0	Configura- tion error drive parameter	Reading/writing error or plausibility error when copying drive parame- ters (control parameter, communications param- eter, application parame- ter or identification parameter) from the con- figuration memory (EEP- ROM ).	Warning	Check user settings for plausibility and correct or go back to the factory setting. Bit 30 = 1!	No
			Fatal	There is an EEPROM memory error; the drive must be replaced and sent back to the manufac- turer Bit 31 = 1!	Yes / EMCY code 6310 <sub>h</sub>
1	Configura- tion error in drive data	Reading/writing error or plausibility error when copying drive data from the configuration mem- ory (EEPROM).	Fatal	There is an EEPROM error in the memory area of the drive and motor data. The drive must be replaced and sent back to the manufacturer. Bit 31 = 1!	Yes / EMCY code 6310 <sub>h</sub>
2	Self test error in Enable input circuit	Error during testing of the Enable hardware during the self test phase (occurs with every switching on of the power supply)	Fatal	Possible defect in the Enable hardware. The drive must be replaced and sent back to the manufacturer Bit 31 = 1! <b>CAUTION:</b> If the drive is turned during the initial- isation and self test phase then this will result in an Enable self-test error!	Yes / EMCY code 5000 <sub>h</sub>
3	Auxiliary voltage undervolt- age (12VDC)	Going below the toler- ance limit (10VDC) or going below the switch off limit (8.5VDC).	Warn/Rev	1) Going below the tolerance limit 10VDC: Bit3 in object $1002_h$ is set. The full drive function continues to be accessible. Bit $30 = 1!$ 2) Going below the switch off limit 8.5VDC: Bit3 in object $1002_h$ is set. The drive stores all run-time data and is put into initialisation status for a self-reset. Bit $31 = 1!$ Measure: In both cases check stability of the central power supply! If the error occurs again or is not removed after initialisation then the drive must be replaced and sent back to the manufac- turer.	1) No 2) Yes / 5110 <sub>h</sub>
4	DC bus overvoltage	Exceeding the tolerance limit (24VDC +20%) or the maximum switch off limit (about 39VDC)	Warn/Rev	1. Exceeding the tolerance limit of 24VDC +20%: Bit4 in object $1002_h$ is set. The full drive function continues to be accessible. Bit 30 = 1! Exceeding the switch off limit of 39VDC: Bit4 in object $1002_h$ is set. The drive stores all run-time data and is put into initialisation status for a self-reset. Bit 31 = 1! <b>Measure:</b> In both cases check stability of the central power supply! If the error occurs again or is not removed after initialisation then the drive must be replaced and sent back to the manufac- turer.	1) No 2) Yes / 3210 <sub>h</sub>

Bit	Designa- tion	Possible cause for the message	Type of message	Remedy	EMCY message
5	DC bus undervolt- age	Going below the toler- ance limit (24VDC -20%) or the switch off limit (15VDC) of the DC bus voltage	Warn/Rev	1) Going below the tolerance limit of $24VDC - 20\%$ ) Bit5 in object $1002_h$ is set. The full drive function continues to be accessible. Bit 30 = 1! 2) Going below the switch off threshold of $15VDC$ : Bit5 in object $1002_h$ is set. The drive stores all run-time data and is put into initialisation status for a self-reset. Bit 31 = 1! Measure: In both cases check stability of the central power supply! If the error occurs again or is not removed after initialisation then the drive must be replaced and sent back to the manufacturer.	1) No 2) Yes / 3220 <sub>h</sub>
6	Supply volt- age over- voltage	Exceeding the tolerance limit of the supply voltage 24VDC +20%	Warning	Exceeding the tolerance limit of 24VDC +20%: Bit6 in object 1002 <sub>h</sub> is set. The full drive function continues to be accessible. Bit 30 = 1!	No
7	Supply volt- age under- voltage	Going below the toler- ance limit (24VDC -20%) or the switch off limit (12VDC) of the supply voltage	Warn/Rev	1 Going below the tolerance limit of 24VDC - 20%) Bit7 in object $1002_h$ is set. The full drive function continues to be accessible. Bit 30 = 1! 2. Going below the switch off threshold of 12VDC: Bit7 in object $1002_h$ is set. The drive stores all run-time data and is put into initialisation status for a self-reset. Bit 31 = 1! Measure: In both cases check stability of the central power supply! If the error occurs again or is not removed after initialisation then the drive must be replaced and sent back to the manufac- turer.	1) No 2) Yes / 3120 <sub>h</sub>
8	Oscillator watchdog	An excessively high vari- ation of the oscillator fre- quency or the oscillator does not reach the spec- ified frequency.	Fatal	The drive must be replaced and sent back to the manufacturer. Bit 31 = 1!	Yes / 0x6000
9	Watchdog timer reset	Reset of the microcon- troller by the watchdog timer	Fatal	The drive must be replaced and sent back to the manufacturer. Bit 31 = 1!	Yes / 0x6000
10	Class B hardware trap	Error message from an internal software moni- toring function	Fatal	The drive must be replaced and sent back to the manufacturer. Bit 31 = 1!	Yes / 0x6000
11	Class B hardware trap	Error message from an internal hardware moni- toring function	Fatal	The drive must be replaced and sent back to the manufacturer. Bit 31 = 1!	Yes / 0x6000
12	not assigned				
13	EEPROM error (stor- ing run-time data)	Error in reading the run- time data previously stored in the EEPROM (logbook)	Fatal	The drive must be replaced and sent back to the manufacturer. Bit 31 = 1!	Yes / 0x5530

Bit	Designa- tion	Possible cause for the message	Type of message	Remedy	EMCY message
14	ROM error (pro- gramme memory)	Not implemented on the IcIA N065			
15	RAM error (data mem- ory)	Not implemented on the IcIA N065			
16	An unex- pected Hall sensor combination	An undefinable Hall sen- sor combination occurs or a sequence occurs during the commutation sequence a number of times	Fatal	The drive must be replaced and sent back to the manufacturer. Bit 31 = 1!	Yes / 0x7122
17	Start up error on the motor	No Hall sensor signals after the start up phase, an excessively high start up torque, drive blocked	Warning	Reduce load, increase operating current or peak current, increase value of the acceleration ramp Bit 30 = 1!	Yes / 0x71AA
18	Deviation in rpm	An excessively high start up torque	Warning	Reduce load, increase operating current or peak current, increase value of the acceleration ramp, choose a low speed of rotation Bit 30 = 1!	Yes / 0x71BB
19	Current lim- iting	The motor current is lim- ited by the parameter- ised maximum current (lowest maximum value from the motor or elec- tronic parameters).	Warning	Reduce load Bit 30 = 1!	Yes / 0x2222
20	Block move- ment	Movement onto an obstacle leads to a drop in speed of rotation or stopping and to an over- current.	Rev	Remove the cause of the blockage (obstacle, dead stop,). In field bus operation: Perform FaultReset (Bit7/object 6040 <sub>h</sub> ). In manual mode: Remove power supply, remove the cause of the blockage, switch on again. Bit 31 = 1!	Yes / 0x7121
21	Overload (I <sup>2</sup> t)	The measured motor current is above the per- missible continuous engine current (calcula- tion with the aid of the I <sup>2</sup> t method, thermal motor monitoring)	Rev	Reduce load or increase operating current. The drive executes a rapid stop. Bit 31 = 1!	Yes / 0x2221
22	Exces- sively high tempera- ture of the power elec- tronics	Exceeding the parame- terised temperature limit values	Warn/Rev	1. Exceeding the temperature warning threshold of 80°C: Bit22 in object $1002_h$ is set. The full drive function continues to be accessible. Bit 30 = 1! 2. Exceeding the temperature switch off thresh- old of 90°C: Bit22 in object $1002_h$ is set. The drive is stopped. Bit 31 = 1! <b>Measure:</b> The drive can be moved again when it has cooled down to below the temperature warning threshold.	1) No 2) Yes / 0x4310
Bit	Designa- tion	Possible cause for the message	Type of message	Remedy	EMCY message
-----	---	---	--------------------	--	-----------------
23	External torque	The drive is pulled out of its rest condition by an external torque. Activa- tion of the message takes place depending on the presettings in object "Position win- dow", 6067h.	Warn/Rev	Checking of the mechanical system. Bit 30 = 1!	Yes / 0xFF29
24	Drive refer- enced	1: Drive is referenced, which means that the commutation pattern and the co-recorded position concur.		No measure necessary.	
		0: The drive is not refer- enced! Cause: The drive was moved while not under power (effect of an external force). Bit 31= Bit 30, both are 0!		The drive must be newly referenced over the fieldbus (position adjustment).	Yes / 0xFF22
25	Move to position	1: The drive has reached the target position win- dow after executing the travel command	Info	No measure necessary.	
26	Motor turns	1: Motor turns itself (Hall sensor signals change) 0: Motor stationary (Hall sensor signals static)	Info	No measure necessary.	
27	not assigned	l			
28	reserved				
29	Standstill demand by Enable sig- nal	1: Enable signal = low (Standstill) - a drive stop was demanded. Neither Bit31 nor Bit30 are set!		If an emergency situation arose! In field bus mode: -Apply hardware Enable signal at potential of the supply voltage.	Yes / 0xFF01
		0: Enable signal = high (Ready-for-operation) - The drive can be moved.		-Execute "Reset fault" (Bit7/object 6040 <sub>h</sub> ). In manual mode without use of a fieldbus: -Remove supply voltage. -Apply hardware Enable signal on the potential of the supply voltage. -Apply supply voltage again. Bit30/Bit31 = 0!	
30	WARNING/ note	Drive is in a critical but not an operation-endan- gering condition. The drive functionality is still available in full for the moment. The cause of the WARNING can be taken from the status information about the object 1002 <sub>h</sub> .	Info	The WARNING cannot be reset in a targetted manner. Bit30 is reset as soon as the event causing the WARNING has been removed and a movement of the drive could be executed with- out a renewed WARNING.	

Bit	Designa- tion	Possible cause for the message	Type of message	Remedy	EMCY message
31	Error/mal- function	Error or malfunction in a monitoring function of the motor operating pro- gramme. The cause of the WARNING can be taken from the status information about the object 1002 <sub>h</sub> .	Info	The possible source of the error can be deter- mined by evaluation of bits 0-29 from object $1002_{\rm h}$ . If it is a reversible error (Rev), then the original source of error must be removed. The command "Reset fault" (change Bit7 in control word/object $6040_{\rm h}$ von 0 ->1) resets the drive into operating mode.	

Table 7.1 Messages about the device status

## 7.3 Error code table

The error code is evaluated with the object  $\tt Error \ code \ (603F_h)$ , an object of the DSP 402 device profile, and output as a four-character hexadecimal number. The error code shows the cause of the last interruption of movement.

Code	Name	Description
0000 <sub>h</sub>	no error	No error
1000 <sub>h</sub>	generic error	General error coding
2221 <sub>h</sub>	motor overload	Overload
2222 <sub>h</sub>	motor current limitation	Current limiting
3110 <sub>h</sub>	mains overvoltage	Supply voltage overvoltage
3120 <sub>h</sub>	mains undervoltage	Supply voltage undervoltage
3210 <sub>h</sub>	DC link overvoltage	Motor DC link overvoltage
3220 <sub>h</sub>	DC bus undervoltage	Motor DC link undervoltage
4310 <sub>h</sub>	excess temperature drive	Excessively high temperature of the power electronics
5000 <sub>h</sub>	device hardware	Self-test errors hardware (here enable switching circuit)
5110 <sub>h</sub>	supply undervoltage	Auxiliary voltage VDD undervoltage
5510 <sub>h</sub>	data storage RAM	Self-test failure of the data memory
5530 <sub>h</sub>	data storage EEPROM	Self-test failure of the configuration memory
6000 <sub>h</sub>	device software	Microcontroller, internal processing or hardware error
6010 <sub>h</sub>	software reset (watchdog)	Software reset by the watchdog timer (timeout in the software execution)
6310 <sub>h</sub>	loss of parameters	Parameter loss in the non-volatile configuration data memory (motor/electron- ics parameter, identification parameter, application parameter, control param- eter and communications parameter)
7121 <sub>h</sub>	motor blocked	Block movement
7122 <sub>h</sub>	motor error or commutation	Hall error
71AAh	motor start failed	Start up error on the motor
71BBh	motor rpm failed	Motor speed deviation
8110 <sub>h</sub>	queue overrun	Overflow of the CAN message buffer. Possible cause of the error: Loss of the communication connection.
8210 <sub>h</sub>	PDO not processed	PDO could not be discharged. Possible cause of the error: Receipt of a faulty PDO message.
FF00h	device specific	Additional drive/motor errors

Code	Name	Description
FF01h	emergency stop	Hardware enable signal = Low - drive has been stopped
FF03h	negative limit switch	Negative end position sensor run over
FF04h	positive limit switch	Positive end position sensor run over
FF10h	general application	Application: general error
FF11h	illegal mode application	Application: invalid operating mode
FF12h	illegal parameter application	Application: invalid parameter value
FF13h	position value application	Application: invalid position value
FF14h	usrerr poslim	Application: invalid position memory
FF15h	communication (NMT)	Communication error for NMT
FF20h	general drive controller	Motor control: general error
FF21 <sub>h</sub>	power drive enabled	Motor control: controllers not ready
FF22 <sub>h</sub>	no reference	Motor control: Drive is not referenced
FF23 <sub>h</sub>	drive moves	Motor control: Drive not at standstill
FF24 <sub>h</sub>	illegal mode drive controller	Motor control: invalid operating mode
FF25 <sub>h</sub>	illegal parameter drive controller	Motor control: invalid parameter value
FF26 <sub>h</sub>	parameter too low	Motor control: parameter value too low
FF27h	parameter too high	Motor control: parameter value too large
FF28h	position not accepted	Motor control: position not accepted/processed
FF29h	external force	Effect of an external force
FF2Ah	position overrun error	Drive has not reached its target position due to the effect of an external force
FF2Bh	velocity exceeded	Drive was accelerated to above its maximum rpm through the action of an external force
FF30 <sub>h</sub>	illegal homing method	Illegal homing method
FF33 <sub>h</sub>	negative limit switch active	Drive standing at the negative end position sensor
FF34 <sub>h</sub>	positive limit switch active	Drive standing at the positive end position sensor
FF35 <sub>h</sub>	negative limit switch disabled	Negative end position sensor disabled
FF36 <sub>h</sub>	positive limit switch disabled	Positive end position sensor disabled
FF37h	home switch disabled	Reference sensor disabled
FF83 <sub>h</sub>	drive at target position	Drive at setpoint

Table 7.2 Error codes

# 8 Accessories and spare parts

# 8.1 Accessories

Designation	Order number
Braking Resistor Controller UBC60	ACC3EA001
Source commissioning software	The latest version of the commissioning software is available for down- load from the internet:
	http://www.schneider-electric-motion.com
Cable	Supplier recommendations:
	<ul> <li>Hans Turck GmbH &amp; Co. KG <u>www.turck.com</u></li> </ul>
	<ul> <li>Franz Binder GmbH &amp; Co. elektrische Bauelemente KG <u>www.binder-connector.de</u></li> </ul>
	PHOENIX CONTACT GmbH & Co. KG <u>www.phoenixcontact.com</u>
	Lumberg Automation <u>www.lumberg-automation.com</u>
Signal interface	Supplier recommendations:
	FCT electronic GmbH <u>www.fct-electronic.de</u>
Source product manuals	The current product manuals are available for download from the Inter- net. http://www.schneider-electric-motion.com

# 9 Service, maintenance and disposal

# **A** CAUTION

Destruction of system components and loss of control monitoring

Excessive currents can be created at the signal connections if the negative connection to the controller supply voltage is interrupted.

- Do not interrupt the negative connection between power supply unit and load with a fuse or switch
- Check for correct connection before switching on.
- Never connect the controller supply voltage or change its wiring while there is supply voltage present.

Failure to follow these instructions can result in injury or equipment damage.



You cannot carry out repairs yourself. The repair should only be carried out by a certified customer service organisation. No warranty or liability is accepted for repairs made by the customer.

## 9.1 Service address

If you cannot resolve the fault yourself please contact your appointed sales partner. Have the following details available:

- Type plate (Type, identification number, serial number, DOM, ...)
- Type of fault (possibly with flash code or fault number)
- Previous and concurrent conditions
- Your own ideas regarding the cause of the fault

Include this information if you return the product for inspection or repair.



If you have any questions please contact your local dealer. Your dealer will be happy to give you the name of a customer service outlet in your area.

### 9.2 Maintenance

The product is maintenance free.

### 9.3 Replacing units

## A WARNING

**IcIA N065** 

#### **Unexpected behaviour**

The behaviour of the drive system is governed by numerous stored data or settings. Unsuitable settings or data may trigger unexpected movements or reactions to signals and disable monitoring functions.

- Do not operate a drive system with unknown settings or data.
- Check the stored data or settings.
- When commissioning carefully run tests for all operating statuses and fault cases.
- Check the functions after replacing the product and also after making changes to the settings or data.
- Only start the system if there are no persons or materials in the danger zone and the system can be operated safely.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Observe the following procedure when changing the devices.

- Store all parameter settings using the commissioning software on your PC.
- Switch off all supply voltages. Make sure that power is no longer connected (safety instructions).
- ► Label all connections and remove the product.
- Note the identification number and the serial number from the product nameplate for later identification.
- ▶ Install the new product as specified in chapter 4 "Installation"
- Carry out commissioning as described in Chapter 5 "Commissioning"

## 9.4 Shipping, storage, disposal

*Removal* Removal procedure:

- Switch off the power supply.
- ► Disconnect the power supply.
- ▶ Pull out all plugs.
- ► Remove the product from the system.
- *Shipping* The product must be protected against shocks during transport. Use the original packaging for this purpose.
- Storage Store the product only under the specified, approved environmental conditions for room temperature and humidity. Protect the product against dust and dirt.
- *Disposal* The product consists of various materials that can be recycled and must be disposed of separately. Dispose of the product in accordance with local regulations.

# 10 Glossary

### 10.1 Units and conversion tables

The value in the specified unit (left column) is calculated for the desired unit (top row) with the formula (in the field).

Example: conversion of 5 metres [m] to yards [yd] 5 m / 0.9144 = 5.468 yd

#### 10.1.1 Length

	in	ft	yd	m	cm	mm
in	-	/ 12	/ 36	* 0.0254	* 2.54	* 25.4
ft	* 12	-	/ 3	* 0.30479	* 30.479	* 304.79
yd	* 36	* 3	-	* 0.9144	* 91.44	* 914.4
m	/ 0.0254	/ 0.30479	/ 0.9144	-	* 100	* 1000
cm	/ 2.54	/ 30.479	/ 91.44	/ 100	-	* 10
mm	/ 25.4	/ 304.79	/ 914.4	/ 1000	/ 10	-

#### 10.1.2 Mass

	lb	oz	slug	kg	g
lb	-	* 16	* 0.03108095	* 0.4535924	* 453.5924
oz	/ 16	-	* 1.942559*10 <sup>-3</sup>	* 0.02834952	* 28.34952
slug	/ 0.03108095	/ 1.942559*10 <sup>-3</sup>	-	* 14.5939	* 14593.9
kg	/ 0.453592370	/ 0.02834952	/ 14.5939	-	* 1000
g	/ 453.592370	/ 28.34952	/ 14593.9	/ 1000	-

#### 10.1.3 Force

	lb	oz	р	dyne	Ν
lb	-	* 16	* 453.55358	* 444822.2	* 4.448222
oz	/ 16	-	* 28.349524	* 27801	* 0.27801
р	/ 453.55358	/ 28.349524	-	* 980.7	* 9.807*10 <sup>-3</sup>
dyne	/ 444822.2	/ 27801	/ 980.7	-	/ 100*10 <sup>3</sup>
Ν	/ 4.448222	/ 0.27801	/ 9.807*10 <sup>-3</sup>	* 100*10 <sup>3</sup>	-

#### 10.1.4 Power

	HP	W
HP	-	* 745.72218
W	/ 745.72218	-

### 10.1.5 Rotation

	1/min (RPM)	rad/s	deg./s	
1/min (RP	PM) -	* π / 30	* 6	
rad/s	* 30 / π	-	* 57.295	
deg./s	/ 6	/ 57.295	-	

#### 10.1.6 Torque

	lb∙in	lb∙ft	oz∙in	Nm	kp∙m	kp⋅cm	dyne⋅cm
lb∙in	-	/ 12	* 16	* 0.112985	* 0.011521	* 1.1521	* 1.129*10 <sup>6</sup>
lb∙ft	* 12	-	* 192	* 1.355822	* 0.138255	* 13.8255	* 13.558*10 <sup>6</sup>
oz∙in	/ 16	/ 192	-	* 7.0616*10 <sup>-3</sup>	* 720.07*10 <sup>-6</sup>	* 72.007*10 <sup>-3</sup>	* 70615.5
Nm	/ 0.112985	/ 1.355822	/ 7.0616*10 <sup>-3</sup>	-	* 0.101972	* 10.1972	* 10*10 <sup>6</sup>
kp∙m	/ 0.011521	/ 0.138255	/ 720.07*10 <sup>-6</sup>	/ 0.101972	-	* 100	* 98.066*10 <sup>6</sup>
kp∙cm	/ 1.1521	/ 13.8255	/ 72.007*10 <sup>-3</sup>	/ 10.1972	/ 100	-	* 0.9806*10 <sup>6</sup>
dyne∙cm	/ 1.129*10 <sup>6</sup>	/ 13.558*10 <sup>6</sup>	/ 70615.5	/ 10*10 <sup>6</sup>	/ 98.066*10 <sup>6</sup>	/ 0.9806*10 <sup>6</sup>	-

## 10.1.7 Moment of inertia

	lb∙in²	lb.ft <sup>2</sup>	kg⋅m²	kg⋅cm²	kp⋅cm⋅s²	oz₊in²	
lb∙in²	-	/ 144	/ 3417.16	/ 0.341716	/ 335.109	* 16	
lb⋅ft <sup>2</sup>	* 144	-	* 0.04214	* 421.4	* 0.429711	* 2304	-
kg∙m²	* 3417.16	/ 0.04214	-	* 10*10 <sup>3</sup>	* 10.1972	* 54674	
kg⋅cm <sup>2</sup>	* 0.341716	/ 421.4	/ 10*10 <sup>3</sup>	-	/ 980.665	* 5.46	
kp⋅cm⋅s <sup>2</sup>	* 335.109	/ 0.429711	/ 10.1972	* 980.665	-	* 5361.74	
oz∙in²	/ 16	/ 2304	/ 54674	/ 5.46	/ 5361.74	-	

## 10.1.8 Temperature

	°F	°C	К
°F	-	(°F - 32) * 5/9	(°F - 32) * 5/9 + 273.15
°C	°C * 9/5 + 32	-	°C + 273,15
к	(K - 273.15) * 9/5 + 32	K - 273.15	-

#### 10.1.9 Conductor cross section

AWG	1	2	3	4	5	6	7	8	9	10	11	12	13
mm <sup>2</sup>	42.4	33.6	26.7	21.2	16.8	13.3	10.5	8.4	6.6	5.3	4.2	3.3	2.6
AWG	14	15	16	17	18	19	20	21	22	23	24	25	26
mm <sup>2</sup>	2.1	1.7	1.3	1.0	0.82	0.65	0.52	0.41	0.33	0.26	0.20	0.16	0.13

# 10.2 Terms and Abbreviations

Actual position	Current absolute or relative position of moving components in the drive system.
Address	Memory location which can be accessed by its unique number. See also Slave address.
CAN	(Controller Area Network), standardized open Fieldbus over which the drives and other devices from different manufacturers communicate with one another.
CANopen	Device and manufacturer-independent description language for com- munication in the CAN bus
DC	Direct current
DC bus	Electric circuit that generates the direct current required to operate the motor and supplies the required energy to the power electronics. The DC bus acts as a buffer for energy fed back by the motor.
Direction of rotation	Rotation of the motor shaft in a positive or negative direction of rotation. A positive direction of rotation is defined as the motor shaft rotating clockwise as the observer faces the end of the protruding shaft.
Drive system	System consisting of controller, power electronics and motor.
EC	European Community
EC motor	Electronically commutated motor
EDS	Electronic Data Sheet Contains the technical data for the motor and gearbox and is loaded in the factory.
EMC	Electromagnetic compatibility.
EU	European Union
Fieldbus	A bus optimised for data transmission between field devices. A Fieldbus is "open", meaning that it is not proprietary (not supported by only one manufacturer). The parameter settings of the drive system can be called and modified via the Fieldbus, inputs can be monitored and outputs con- trolled and diagnosis and error monitoring functions enabled.
Hall sensor	Sensor for determining position
Holding brake	brake that only prevents the motor from rotating without power after it has stopped (e.g. a vertikal-axis lowering). It must not be used as a service brake for braking motion.
I/O	Inputs/Outputs
l <sup>2</sup> t-monitoring	Predictive temperature monitoring. The expected temperature rise of unit components is calculated in advance on the basis of the motor cur- rent. If a limit value is exceeded, the drive system reduces the motor cur- rent.
ldx	Index value of a parameter
Inc	Increment
Limit switch	Switch that signals an overrun of the permissible travel range.
LSS	Layer setting services, setting services of the CAN application layers
М	Motor

Master	Active bus user that controls the data traffic in the network.
Node Guarding	Monitoring function with slave at an interface for cyclic communication.
node ID	Node address assigned to a device on the network.
Parameter	Device functions and values that can be set and called by the user.
PC	Personal Computer
PDO	Process Data Object
PELV	Protective Extra Low Voltage, functional low voltage with safe isolation.
PLC	Programmable Logic Controller
power electronic system	This is the unit that controls the motor. The power electronics generate currents for controlling the motor in accordance with the positioning signals from the control unit.
Protection class	The protection class is a standardised specification for electrical equip- ment that describes the protection against the ingress of foreign bodies and water (for example, IP20).
Protocol	Guideline that specifies the format required for transmitting data.
Quick Stop	Quick stop, function used to provide quick braking of the motor via a command or in the event of a fault.
Register	Memory range of specified size (generally 8, 16 or 32 bits) for temporary storage of data transmitted from one system unit to another.
SDO	Service Data Object
Slave	Passive bus device that receives control commands and provides data to the master.
Slave address	Targeted communications between master and slave is only possible with the assignment of unique addresses.
Software limit switch	Limitation of the movement range in both directions of motion, settings are determined specifically with the application. A positioning is possible only within the working range.
Timeout	Error caused by exceeding the maximum allowable time between query and response of devices.
Watchdog	Equipment that monitors cyclic basic functions in the drive system. Power electronics and outputs are switched off in the event of error.

### 11 Index

### Α

Abbreviations 85 ABORT 69 Accessories 77 Accessories and spare parts 77 Accessories for networking 48 Address check 67

#### В

Baud rate check 67 Block movement 65

## С

Cable specifications control inputs for manual operation 46 Enable connection 47 equipotential bonding conductor connection 42 power supply 45, 50 CE mark 16 Characteristic curve IcIA N065 DC024 26 Characteristic curves IcIA N065 U- with angled wormgear 32 IcIA N065 V- with spur wheel gears 28 Check address 67 baud rate 67 Circular plug-in connector assignment of output socket 48 circular plug-in connector assignment of input plugs 48 Commissioning 53 steps 55 Commissioning software 56, 77 features 56 requirements 56 Communication configuration 60 Commutation errors 65 Components and interfaces 11 Configuration mode (for setting parameters) 60 Connection control inputs for manual operation 46 equipotential bonding conductor connection 42 power supply 45 Control inputs for manual operation cable specifications 46 connection 46 Current limiting 63

#### D

Danger classes 20 Declaration of conformity 17 Design data IcIA N065 DC024 25 IcIA N065 U- with angled wormgear 31 IcIA N065 V- with spur wheel gear 27 Diagnostics 67 Directives and standards 16 Disposal 79, 81 Documentation and literature references 15

#### Е

Electrical installation 41 Electronic Data Sheet 13 Electronic log-book 13, 65 EMC 37 Enable connection cable specifications 47 Enable function 61 Environmental conditions 23 Equipotential bonding conductor connection cable specifications 42 equipotential bonding conductor connection connection 42 Equipotential bonding conductors 38 Error code table 74 Error diagnosis connections to field-bus mode 67 function test on fieldbus 67

## F

Fatal error (fatal) 69 Function test on fieldbus 67 Functions 60

## G

Glossary 83

### Η

Hall sensor errors 65 Homing 60

## I

IcIA special features 10 Installation electrical 41 Function test 51 mechanical installation 39 Installation material Field bus connection 48 Installation, electrical Connecting supply voltage 44 Intended use 19 Interruption of movement cause 74 Introduction 9

# L

LMT service 60

#### Μ

Maintenance 79 Manual movement test 51 Manual operation via fieldbus 59 Manual operation via signals 59 manuals 15, 77 Message 69 Message objects 68 EMCY(80h+ node ID) 68 error code (603Fh) 68 error register (1001h) 68 status word (6041h) 68 Messages on the device status 69 Monitoring functions 22, 62 block movement 65 commutation/Hall sensor errors 65 current limiting 63 electronic log-book 65 outside acceleration 65 overload 63 self-test at Power On 62 speed deviation 64 starting error 64 temperature 64 voltages 64 watchdog 66

#### Ν

Network messages after switching on 67 Network operation not possible 67

## 0

Operating functions communication configuration 60 Operating modes 59 homing 60 manual operation via fieldbus 59 manual operation via signals 59 positioning mode 60 speed control mode 60 Operation 59

0098441113268, V2.00, 12.2008

Outside acceleration 65 Overload 63 Overview all connections 41

### Ρ

Positioning mode 60 Positioning mode, operating mode 60 Power supply cable specifications 45, 50 connection 45 product manuals 15, 77 Protection classes 40

### Q

Qualifications, personnel 19

## R

Reversible error (Rev) 69

# S

Scope of supply 9 SDO error message 69 Self-test at Power On 62 Service 79 Service address 79 Shipping 81 Source Commissioning software 56, 77 product manuals 15, 77 Speed control mode 60 Speed control mode, operating mode 60 Speed deviation 64 Starting error 64 Storage 81 Supply voltage connecting 44 System checks 51

## Т

Technical data 23 Temperature 64 Terms 85 Testing fieldbus wiring 51 Troubleshooting 67 Type code 14

### U

Unit overview 10 Units and conversion tables 83

## V

Voltages 64

### W

WARNING (Warn) 69 Watchdog 66